

Pullman Ermator Service sheet

Filter cleaning



Start the machine and lift the valve disc to create a vacuum.



Filter clean with a cleaning unit a time and do the procedure twice per cleaning unit. Wait a few seconds to build up a vacuum.



Turn off the machine.



When the machine has been turned off, push the valve disc into place.

Control before use



Check for any dirt which has stuck in the flap and remove the dirt.



Pull out the bag so it does not get stuck in the flap.



Push up the flap and start the machine.

Longopac



Pull the bag down.



Attach two stripes with a 10cm gap.



Cut between the stripes.

Changing Longopac



Pick up a Longopac and put it with the bags inner end upwards and the outer end facing downward.



Mount the bag into the holder and snip off the ties.



Remount the complete Longopac, tighten internal clearance with a strap, the outer clearance using stripes.

www.pullman-ermator.se

Tel. 0240-660960

Replace coarse filter



Loosen the four clamps which holds the cover.



Open the cover so you can easily replace filters.



Replace the filter with a plastic bag.



Seal the bag.

Replace HEPA-filter



Start by doing the first and second step for changing coarse filter. Loosen the two clamps which hold the HEPA-filer box.



Remove cover.



Remove the HEPA-filter with a plastic bag.



Seal the bag.



**Pullman
Ermator**

