Ermator Service Sheet Jet Puls Cleaning

Longopac





Machine in normal use. The valve plate is in lower position.

Start the Jet puls by lifting the valve plate as shown.



After 10 sec. Push the lever rapidly.



Pull the bag down.



Attach two stripes with a 10cm gap.



Cut between the stripes.

Changing Coarse Filter T-line

Changing Longopac



Loosen the 4 latches that holds the tank.



Carefully turn u the tank, use a mask FPPP3.



Rotate the filter counter-clockwise 5 degrees and then gently lift the filter package up. Fit the new filter package. NOTE Assure that the filter is attached by the latches.



Pick up a Longopac and put it with the bags inner end upwards and the outer end facing downward.



Mount the bag into the holder and snip off the ties.



Remount the complete Longopac, tighten internal clearance with a strap, the outer clearance using stripes.

www.pullman-ermator.se Tel. 0240-660960