



Cleaning the coarse filter through cleaning valve

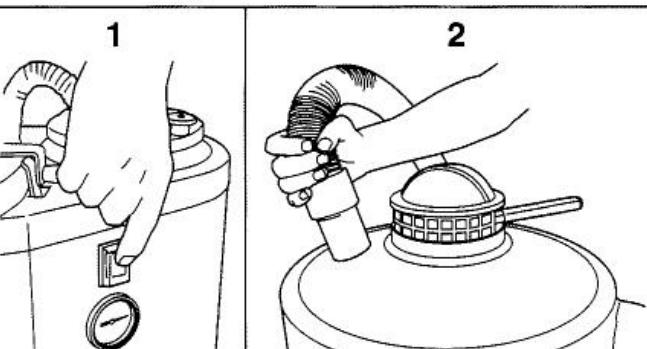

Start the machine.


Block the suction hose by the work place. Wait about 7-10 sec. while the machine builds up a vacuum.

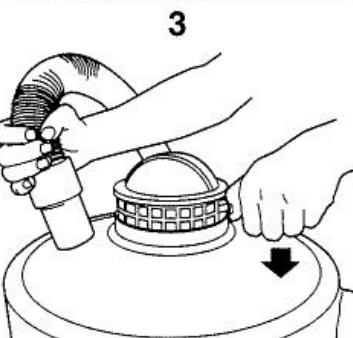

Press the filter cleaning valve hard.

Repeat the whole process 3 times.

LONGOPAC®

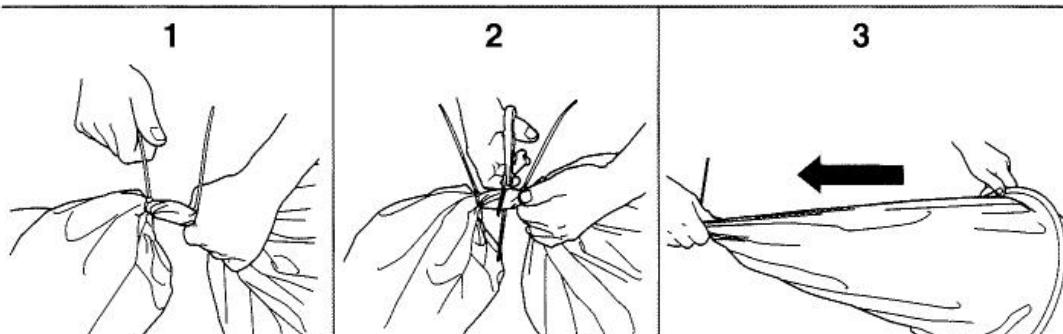

Seal the bag with two sealers.

Cut between the sealers.

Pull out a new bag from the Longopac.

Byte Hepafilter S-line



Lossa lettermuttrarna till filterbehållarens lock.



Lyft därefter varsamt ur mikrofilterpatronen och placera den i lämplig plastpåse, som försluts omedelbart.



Sätt i en ny patron och placera den noggrant i centrum, drag åt lettermuttrarna fast, men ej för hårt, då det kan skada packningen.



**Pullman
Ermator**